

Product information presented here reflects conditions at time of publication. Consult factory regarding discrepancies or inconsistencies.



**PUMP COMPANY**

*Zoeller Family of Water Solutions™*

**MAIL TO:** P.O. BOX 16347 • Louisville, KY 40256-0347  
**SHIP TO:** 3649 Cane Run Road • Louisville, KY 40211-1961  
(502) 778-2731 • 1 (800) 928-PUMP • FAX (502) 774-3624

**visit our web site:**  
[www.zoeller.com](http://www.zoeller.com)


# THE SHARK<sup>®</sup>

*Series*

## PROGRESSING CAVITY GRINDER PUMP

### FEATURES:

- Finned Class 30 Cast Iron Construction
- Corrosion Resistant Powder Coated Epoxy Finish
- Discharge Size - 1 1/4" NPT
- 1 & 2 HP, 60 Hz, 1750 RPM
  - Model 810 - 1 HP, 230 Volts/1 Ph
  - Model 815 - 2 HP, 230 Volts/1 Ph
- UL Listed 20 ft. 3-wire neoprene cord with 15 amp plug
- Oil-Filled - Hermetically Sealed Motor with Class B Windings
- Hardened Stainless Steel Cutter and Disc, Rockwell C55-60
- Stainless Steel Hydraulic Pump Rotor
- Pressure Relief Valve
- Upper and Lower Ball Bearing Construction
- Carbon/Ceramic mechanical seal
- Integral Thermal Overload Protection with Automatic Reset
- SS Mounting Stand for free standing installation
- Preassembled Systems Available

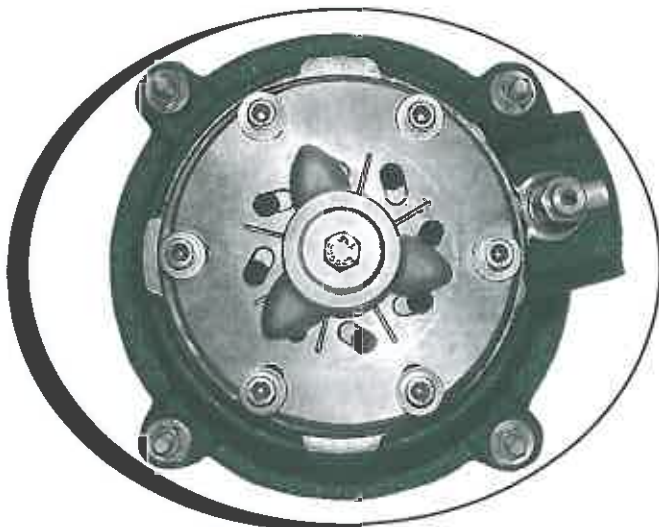

## 810-815 SERIES PROGRESSING CAVITY GRINDER PUMP MODELS

**810 - 1 HP**

**815 - 2 HP**



Product may not be exactly as pictured.

# PREPACKAGED AND JOB READY SYSTEMS

## INDOOR

### REQ.

1 810 or 815 Grinder	P/N _____ (A)
1 Alarm Panel	P/N _____ (B)
1 Piggyback Pump Switch	P/N _____ (C)
1 Weight for Alarm Float	P/N _____ (C)
1 Basin, Cover and Hardware	P/N _____ (E)

## OUTDOOR

### REQ.



1 810 or 815 Grinder	P/N _____ (A)
1 Control Panel/Alarm System	P/N _____ (B)
1 Piggyback Pump Switch	P/N _____ (C)
1 Control Switch (if required)	P/N _____ (C)
1 Junction Box (if required)	P/N _____ (D)
1 Package Basin Assembly	P/N _____ (E)

## FIELD MOUNT SYSTEMS

## SIMPLEX

### REQ.

1 810 or 815 Grinder	P/N _____ (A)
1 Control Panel / Alarm System	P/N _____ (B)
1 Piggyback Pump Switch	P/N _____ (C)
1 Control Switch (if required)	P/N _____ (C)
1 Weight for Alarm Float (if required)	P/N _____ (C)
1 Junction Box (Optional)	P/N _____ (D)
1 Optional Accessories	P/N _____ (F)
	P/N _____ (F)
	P/N _____ (F)
	P/N _____ (F)

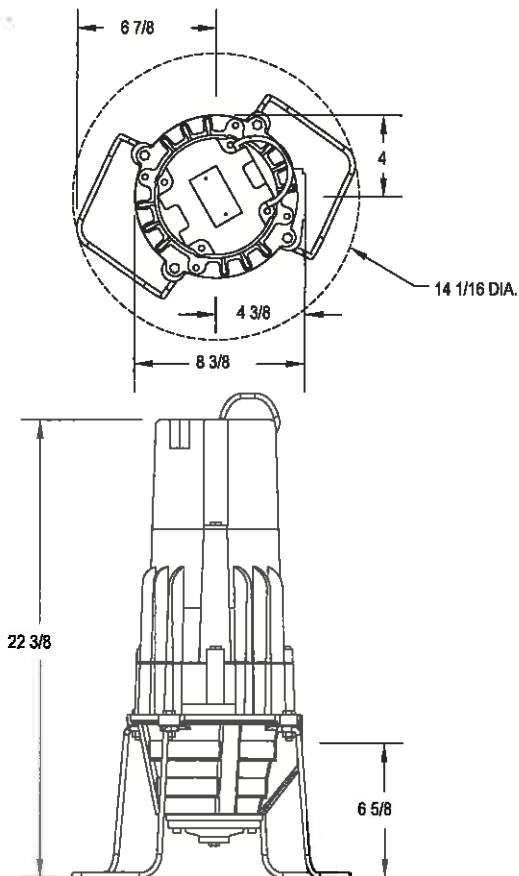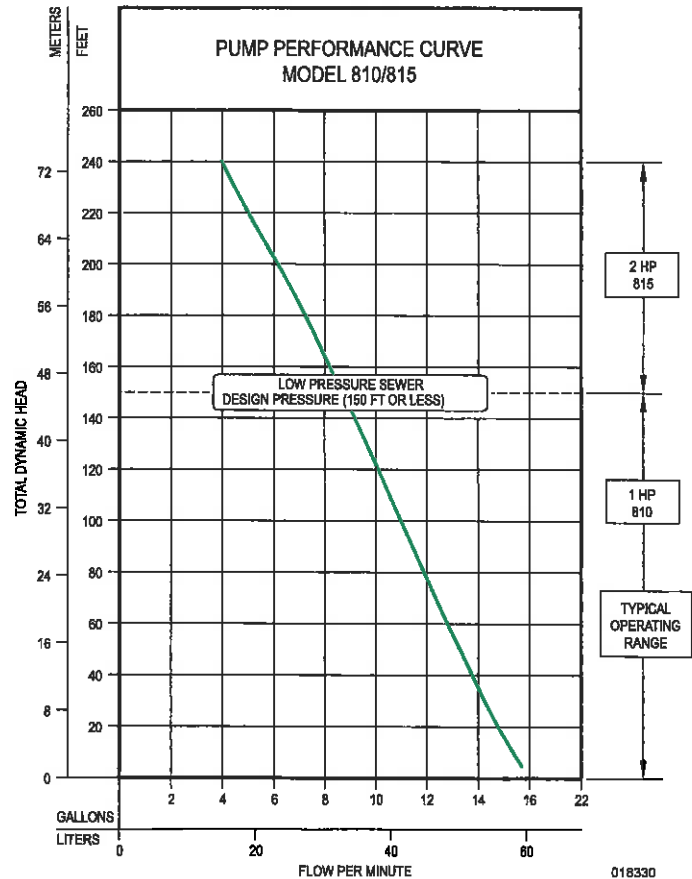



SK2533

### "922" Packaged Systems

Refer to FM2370 for Packaged Fiberglass or Poly-ribbed Basin Assemblies for the models 810 and 815.

Manufacturers of... *"QUALITY PUMPS SINCE 1939"*

72" DEEP = 70 GALLON CAPACITY  
96" DEEP = 150 GALLON CAPACITY

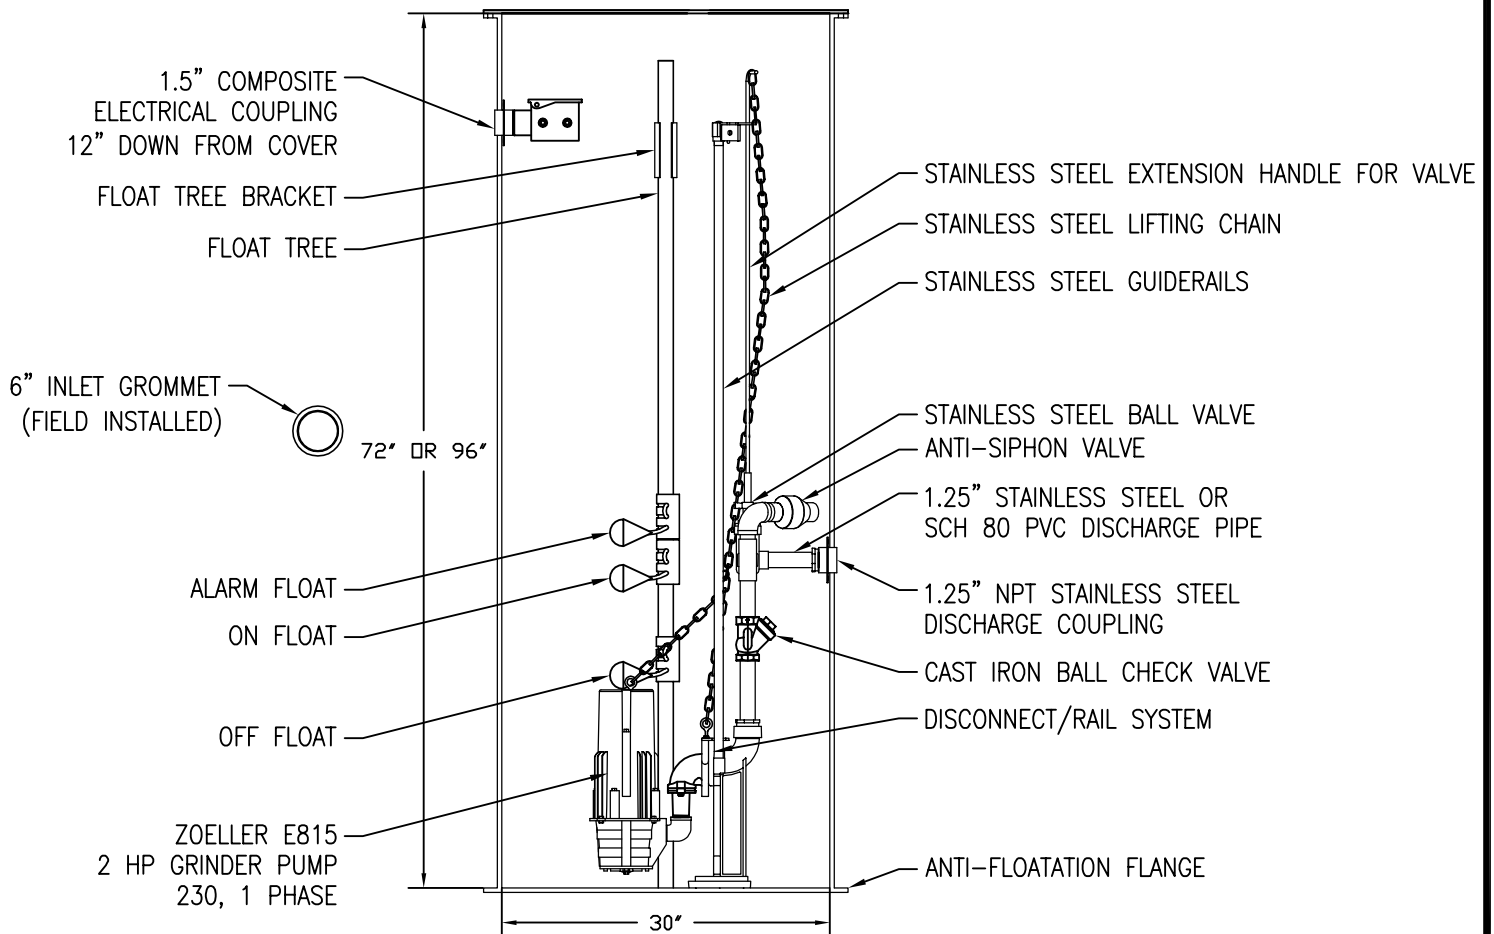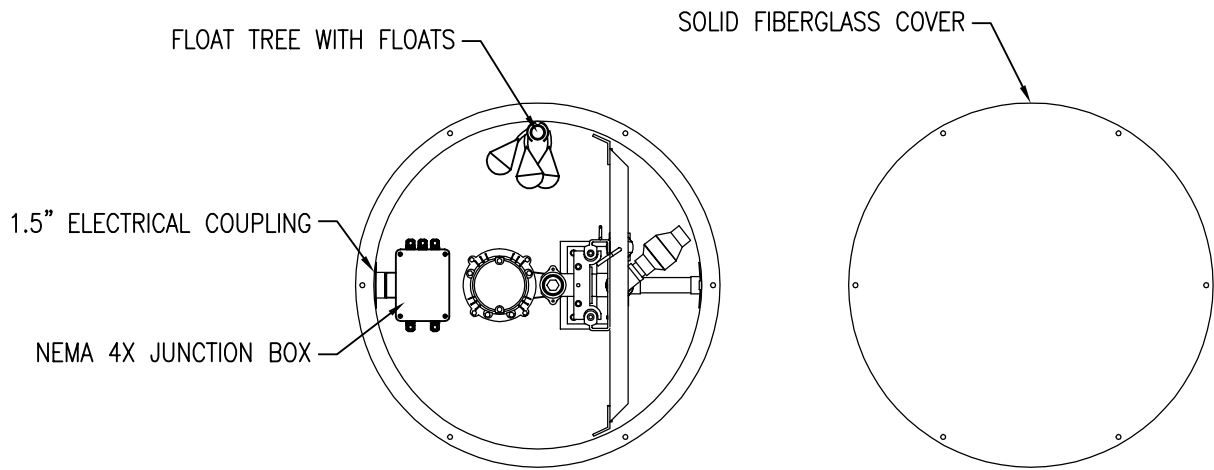

PART NUMBER:  
PPS-3072-815-CLAY  
OR  
PPS-3096-815-CLAY

INDIVIDUAL HOME GRINDER PUMP STATION

CLAY TOWNSHIP REGIONAL WASTE DISTRICT



17220 Harger Court | Noblesville, IN 46060  
(317) 219-4333 p | (317) 219-3370 f  
[www.WatermarkEPS.com](http://www.WatermarkEPS.com)



**Watermark**  
Engineered Product Sales, Inc.

## ***Limited Warranty***

### *Progressive Cavity Grinder Pump Station*

We package a Zoeller progressive cavity grinder pump, a Septic Products control panel and a Topp Industries fiberglass basin to make a complete progressive cavity grinder pump station.

We warrant, to the purchaser and subsequent owners, for a period of two (2) years that every new product will be free from defects in material and workmanship under normal use and service, when properly used and maintained. Any part that may fail within the warranty period will be repaired or replaced at the manufacturer's option, provided however, that by so doing it will not be obligated to replace an entire assembly, entire mechanism or complete unit. No allowance will be made for charges that may occur due to a product failure, repair or replacement.

This warranty does not apply to and there shall be no warranty for any material or product that has been disassembled without prior approval of the manufacturer, subjected to misuse, misapplication, neglect, alteration, accident or act of God; that has not been installed, operated or maintained in accordance with the manufacturer's installation instructions; that has been exposed to outside substances including but not limited to the following: sand, gravel, cement, mud, tar, hydrocarbons, hydrocarbon derivatives (i.e. oils, gasoline, solvents, etc.), or other abrasive, corrosive or stringy substances (i.e. wash towels, feminine sanitary products, nylons, etc.).

This warranty is in lieu of all other warranties expressed or implied.





P.O. Box 420 ♦ 420 N State Rd 25 ♦ Rochester, IN 46975  
Toll Free (800) 354-4534 ♦ (574) 223-3681 ♦ Fax (574) 223-6106  
E-mail: [toppindustrie@toppindustries.com](mailto:toppindustrie@toppindustries.com) ♦ Web-site: [www.toppindustries.com](http://www.toppindustries.com)

## **Fiberglass Basin Installation Reference Guide**

### ***PURPOSE***

The purpose of this is to provide a brief reference to the recommended methods and procedures for installing Topp Industries' underground sump and sewage basins to ensure that damage or premature failure of the basin does not occur.

Studies conducted by both environmental regulatory agencies and trade organizations demonstrate that the most significant source of leaks and failures in underground storage systems is improper handling and installation. Proper handling and installation requires practical experience combined with strict adherence to proven methods and procedures.

This guide is **not** intended to serve as a basin instructional manual. The installation of our sump and sewage basins is a specialized skill, and it is assumed that the individuals who install our products and refer to this guide will have a basin understanding of such procedures as excavating, backfilling, pipefitting and electrical work. No amount of written instruction by a manufacturer or a regulatory agency will convert an inexperienced, under supervised laborer into a skilled, experienced mechanic. The ability to recognize and correctly respond to abnormal conditions during a basin installation requires field experience as well as mechanical aptitude.

In addition to proper system engineering and competent manufacturing, the use of basin installers who have both practical experience and integrity to insist that the basin be installed properly constitutes the greatest protection from catastrophic basin failure and liability exposure.

### ***DISCLAIMER***

Every reasonable effort has been put forth by Topp Industries, Inc. and its agents to ensure the accuracy and reliability of the information contained in this reference guide. However, neither Topp Industries, Inc., its agents, or its consultants make any representation, warranty, or guarantee in connection with the publication of these recommended methods and procedures. Topp Industries, Inc. hereby disclaims any liability for loss or damage resulting from their use; for the violation of any federal, state, county or municipal regulations with which these recommended methods and procedures may conflict; or for the infringement of any patent resulting from the use of these recommended methods and procedures.

These handling and installation instructions are **not** intended to preclude normal safety procedures, which should be followed to prevent injury to personnel. **SAFE INSTALLATION PROCEDURES SHALL BE ENTIRELY THE RESPONSIBILITY OF THE INSTALLER.**

### ***MATERIAL HANDLING***

**GENERAL HANDLING.** Although the exterior surfaces of our fiberglass reinforced plastic (FRP) sump and sewage basins are designed to withstand normal handling, they can be damaged during transportation and installation. Basins must not be dropped, dragged or handled with sharp objects and with the exception of the minimal movement involved in a visual inspection, should not be rolled.

If the basin or its shell is damaged, installation should be suspended until a determination of the extent of damage can be made by Topp Industries, Inc. or its agent. Any repairs must be first authorized in writing by Topp Industries, Inc. and then be done in accordance with Topp Industries, Inc. instructions.





P.O. Box 420 ♦ 420 N State Rd 25 ♦ Rochester, IN 46975  
Toll Free (800) 354-4534 ♦ (574) 223-3681 ♦ Fax (574) 223-6106  
E-mail: [toppindustrial@toppindustries.com](mailto:toppindustrial@toppindustries.com) ♦ Web-site: [www.toppindustries.com](http://www.toppindustries.com)

#### ***MATERIAL HANDLING, continued***

**UNLOADING, LIFTING AND LOWERING.** The proper way of moving a basin is by lifting it, using chains or cables with the optional lifting lugs (not more than 30° included angle) or by using a non-marring sling around the basin. Before any attempt is made to move the basin, it should be established that all the equipment and accessories have sufficient capacity and reach to lift and lower the basins without dragging and/or dropping. Basins should be maneuvered with guide ropes attached to the sides.

**WARNING!** Under no circumstances is the use of chains or cables around the basin shell permitted.

**STORAGE.** Basins should be stored in a secure, controlled area where the potential for accidental damage or vandalism will be minimized. The storage area should be free from sharp objects, rocks and any other foreign solutions or materials that could cause damage to the basins. Chock the basins until they are needed for installation and if windy conditions are possible, secure the basins with non-marring restraints of a size and number adequate for securing the basin.

**PRE-INSTALLATION INSPECTION.** Basins, valves, equipment and piping materials should be physically and visually inspected prior to installation. Adherence to the project's specifications should also be confirmed before installation. If the basin or any of its internal components are damaged, installation should be suspended until a determination of the extent of damage can be made by Topp Industries, Inc. or its agent. Any repairs must be first authorized in writing by Topp Industries, Inc. and then be done in accordance with Topp Industries' instructions.

#### ***EXCAVATING***

**EXCAVATING.** The excavation should provide adequate space for the basin, piping and other buried equipment and for the placement and compaction of backfill materials particularly around the basin walls. The size, shape and wall slope of the excavation should be determined by soil conditions, depth of excavation, shoring requirements, and, if workers are required to enter the excavation, safety considerations and federal, state, county and municipal regulations.

**WARNING!** Locate all overhead and underground utilities before excavating.

**LOCATION OF EXCAVATION.** Excavation for an underground basin should be made with due care to avoid undermining foundations of existing structures and contact with underground utilities. In the absence of building codes or regulations, maintain a minimum distance of five feet plus a slope of 45° from the bottom of the compacted sub-base to the bottom of the adjacent structures, foundations, footings and property lines (as shown in the attached illustration). Additional distances may be required to assure that any loading carried or created by the foundations and support cannot be transferred to the basins.

**MAXIMUM BURIAL DEPTH.** If burial depth is greater than the basin height, contact Topp Industries, Inc. to determine if additional wall reinforcement is required and secure written authorization.

**HANDLING OF EXCAVATED MATERIALS.** Excavated materials, which cannot be removed from the jobsite, should be carefully stored as far from the edge of the basin excavation as possible. Unless approved for use as backfill, excavation materials should be securely stored separate from approved backfill materials.

**WORK AREA SAFETY.** Safe installation procedures shall be the sole responsibility of the basin installer. Work safety requirements are defined in U.S. Department of Labor 29 CFR part 1926, subpart P, Excavations.





P.O. Box 420 ♦ 420 N State Rd 25 ♦ Rochester, IN 46975  
Toll Free (800) 354-4534 ♦ (574) 223-3681 ♦ Fax (574) 223-6106  
E-mail: [toppindustrie@toppindustries.com](mailto:toppindustrie@toppindustries.com) ♦ Web-site: [www.toppindustries.com](http://www.toppindustries.com)

### **BACKFILLING**

**GENERAL.** Careful selection, placement and compaction of approved backfill material are critical to a successful basin installation. Among common problems associated with basin leaks and premature failures are:

- Use of an incorrect backfill material.
- Inadequate or improper placement or compaction.
- Rocks, clods or debris left in the excavation or basin.
- Voids under or around the perimeter of the basin.
- Failure to prevent the migration of backfill materials.

**PLACEMENT OF BASIN.** The bottom of the basin excavation should be covered with suitably graded, leveled and compacted backfill material to a depth of at least 12 inches (compacted sub-base). If a concrete hold-down/anti-floatation pad is required, this bedding can be reduced to a depth of at least 6 inches. The basin should then be carefully lowered into the excavation and centered on the compacted backfill or concrete pad (see attached illustration).

**WARNING!** Placement of a basin on a concrete pad or compacted sub-base smaller than the total basin bottom area or on intermediate supports (saddles) will cause uneven distribution of loads. This may contribute to structure failure and is never permitted.

**BACKFILL MATERIAL.** Backfill material should be clean, well granulated, free flowing, non corrosive and inert. It should be free of ice, snow, debris, rock, or organic material, all of which could damage the tank and interfere with the compaction of the backfill material. The largest particles should not be larger than ¾ inch. Not more than 3 percent (by weight) should pass through a #8 sieve, and the backfill material should conform to ASTM C-33, Paragraph 9.1 requirements. Approved backfill materials include:

- Pea Gravel, naturally rounded particles with a minimum diameter of 1/8 inch and a maximum diameter of ¾ inch.
- Crushed Rock, washed and free-flowing angular particles between 1/8 inch and ½ inch in size.

**PLACEMENT AND COMPACTION OF BACKFILL.** Compaction of backfill materials should be adequate to ensure the support of the tank and to prevent movement or settlement. Backfill materials should be placed in 12 inch lifts and compacted to a minimum soil modulus of 700 pounds per square foot (psf).

**SUPPORTING PIPING, EQUIPMENT AND ACCESSORIES.** Support for piping, equipment and other accessories must be provided during backfilling. Using the basin to support piping, equipment, cribbing, bracing or blocking is never permitted. During backfilling, temporary supporting materials must be carefully installed and removed to prevent damage to the basin, piping or equipment.

**WARNING!** Using the basin to support any loading carried or created by piping, equipment, cribbing, bracing or blocking is never permitted.

### **ANCHORAGE**

**GENERAL.** When basin installations are located in areas subject to high water tables or flooding, provision should be made to prevent the basins, either empty or filled, from floating.



P.O. Box 420 ♦ 420 N State Rd 25 ♦ Rochester, IN 46975  
Toll Free (800) 354-4534 ♦ (574) 223-3681 ♦ Fax (574) 223-6106  
E-mail: [toppindustrie@toppindustries.com](mailto:toppindustrie@toppindustries.com) ♦ Web-site: [www.toppindustries.com](http://www.toppindustries.com)

#### ***ANCHORAGE, continued***

The buoyancy force to be offset is determined primarily by the volume of the basin. The principle offsetting factors include:

- Backfill materials.
- Concrete hold-down pad.
- Friction between the tank, backfill materials and the surrounding soil.

**METHODS OF ANCHORING.** All methods of anchoring basins use the weight of the backfill materials to offset the buoyancy forces. The use of supplemental mechanical anchoring methods (a concrete hold-down pad) increases the amount of backfill ballast which is mechanically attached to the basin. The recommended method of attachment is to pour concrete grout over the basin's anti-floatation flange and concrete hold-down pad (see attached illustration).

**ANCHORAGE REQUIREMENTS.** Requirements for anchorage, thickness of concrete hold-down pads, as well as the size of anchors and reinforcement must be calculated for each installation based on the environmental conditions of that specific installation.



**WARNING!** Use "submerged" material weights when calculating anchorage requirements.

Example: weight of concrete (150 pounds per cubic foot) minus the weight of the water (62.4 pounds per cubic foot) equals a "submerged" weight of 87.6 pounds per cubic foot.





# FIBERGLASS BASIN INSTALLATION REFERENCE GUIDE

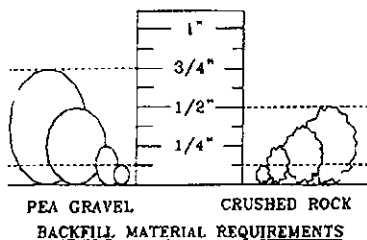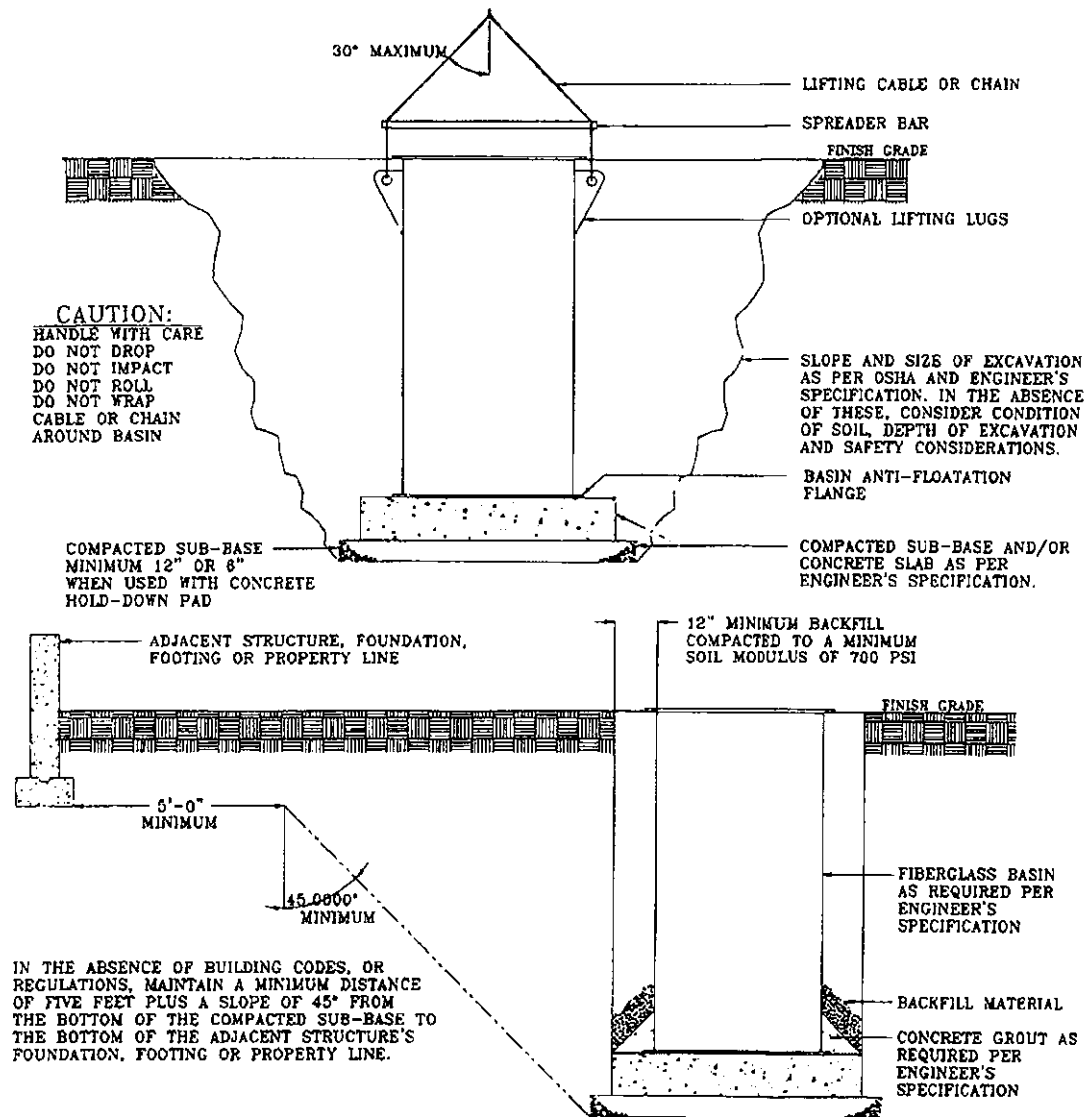

## NOTE:

The intent of these installation instructions and illustrations is to ensure that damage or premature failure to the basin will not occur. These installation instructions and illustrations are NOT intended to preclude normal safety procedures which should be followed to prevent injury to personnel. SAFE INSTALLATION PROCEDURES SHALL BE ENTIRELY THE RESPONSIBILITY OF THE INSTALLER.




## CONTROL PANEL

### **"50A006-C20" Model Simplex 115/208/230V 1 Phase Control Panel**

#### **Features & Benefits**

- Separate Breakers for Pump and Control Circuits
- Separate Power Supplies for Pump and Control Circuits
- Definite Purpose Motor Contactors
- Easy to Access Terminal Block
- Usable with 115/208/230 VAC 1PH Power
- Alarm Silence & On-Off-Test Switches
- Externally Mounted Audible Alarm
- Pump Hand-Off-Auto Switches
- Pump Running Lights
- Large External Alarm Light
- Control Circuit Fuse Protection
- Ground Lugs
- Color Coded Internal Wiring
- Rugged Weather Resistant Hinged Poly Enclosure w/Sst Latches
- Built and Labeled to UL 508A Standard w/Nema 4x Rating
- Provided with Wiring Schematic and Detailed Connection Diagram for Installer
- Mounting Feet for Enclosure

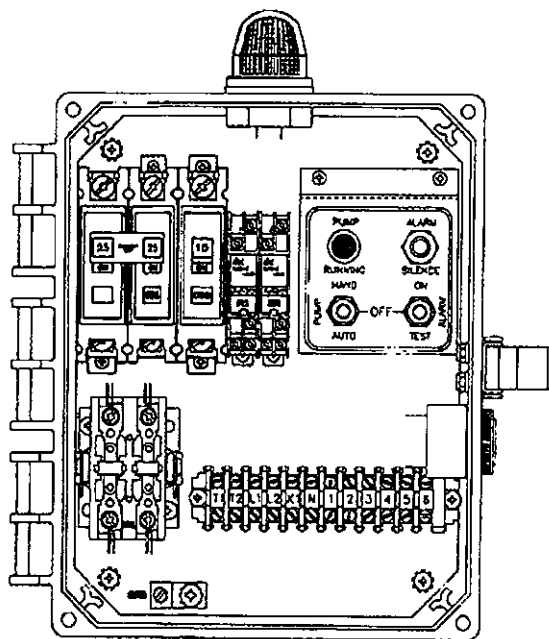

(50A006-C20 Model Shown)




\*Note: Consult the factory for other available options. Also some options may require an increase in the enclosure size.


Septic Products, Inc. 1378 Twp Rd Ashland, Ohio 44805 Ph: (419)282-5933 Fax: (419)282-5943

**"50A006-C20" Model Simplex 115/208/230V 1 Phase Control Panel**

Panel Dimensions

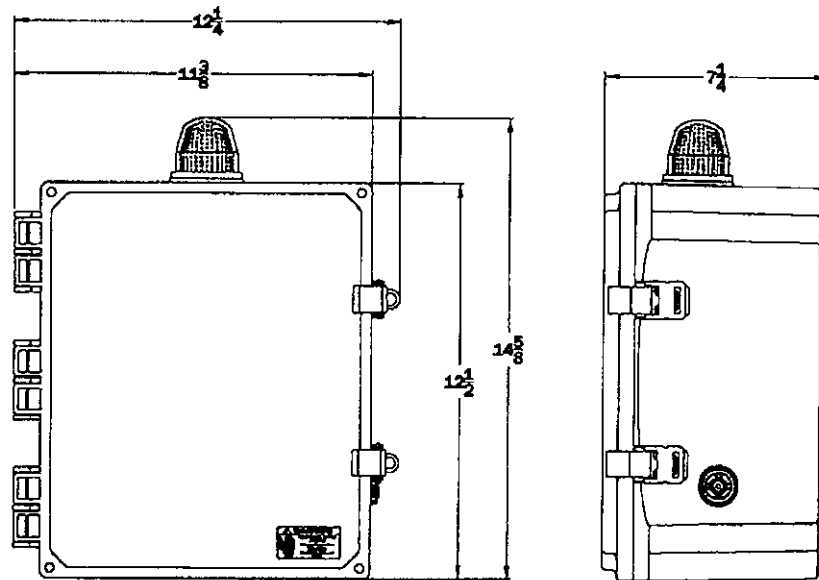

Panel Schematic

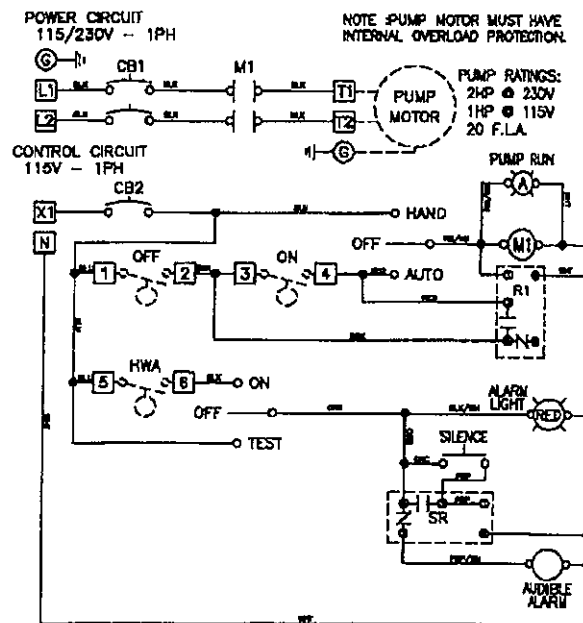






## Float Switches

### "20A700" Series M-Pilot Series Float Switches

#### Features & Benefits

- Durable Polypropylene Body Foam Filled Construction
- Mercury Type Switch Actuation
- Narrow Angle (10° Operating Range)
- Control or Pilot Duty Rated Only
- Ideal for use with Control Panels
- Rated 5 amps @ 120VAC/240VAC
- Available in Pump Up or **Pump Down** Configurations
- Available w/External Weight, SST Pipe Clamp or Cable Tie
- Multiple Cord Lengths Available - 15'

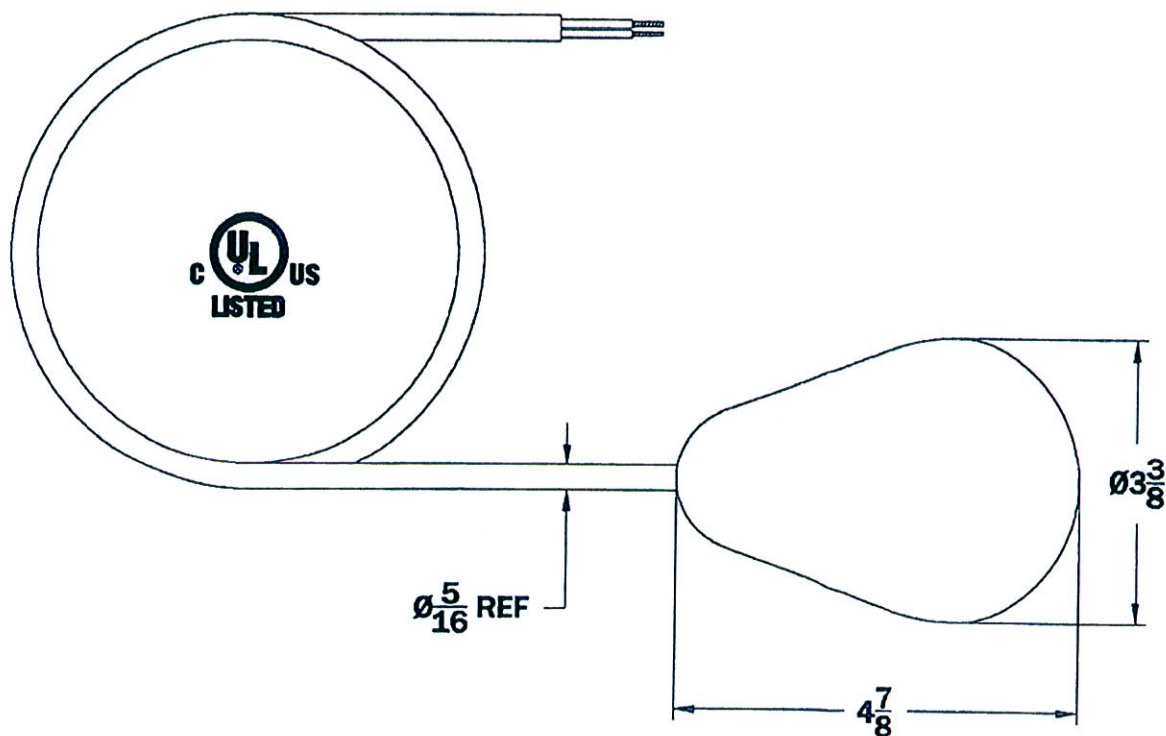

\*Note: Consult the factory for other available options. Not Recommended for Potable Water Applications.